

INSTALLATION GUIDE

KIT-OVO-BS-BL

SURFACE ADAPTER

OVO SERIES
OVOS SERIES

IMPORTANT INSTRUCTIONS

The surface adapter is for use in cases the fan heater cannot be installed in-wall. It is compatible with OVO and OVOS models only. There are two knock out locations for quick and easy installation with surface-mounted power cable & conduit.

During surface installation, the surface adapter serves as a back box, and the latter must not be installed. Any references to the back box for subsequent steps in the OVO/OVOS owner's manual should be interpreted as referring to the surface adapter.

Before beginning installation, refer to the *Important instructions* section in your owner's manual.

WHAT IS IN THE BOX

Surface adapter

TOOLS AND MATERIAL REQUIRED

- Level
- · Electrical fitting
- · Wire conduit
- Screwdriver
- 4 screws and suitable supports to hold the device's weight based on the wall finishing
- Tools to install the supports, as needed



CUTTING THE POWER SUPPLY


To protect yourself from the risk of electric shock, turn off the power to the lead wires from the electrical panel.

1


PREPARING FOR ELECTRICAL CONNEXION

1. Remove one of the two knock-outs [A].

Note: If the power cable comes from inside the wall, a hole can be drilled in the back of the surface adapter using proper tools.

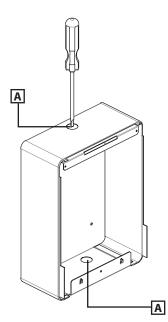

NOTE: The unit must not be installed upside down nor sideways.




VERTICAL INSTALLATION



HORIZONTAL INSTALLATION

2. Insert fitting* **[B]** in the hole and secure it in place.

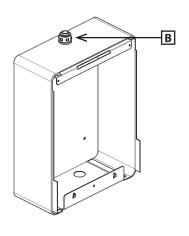



*Electrical fitting not included

2

INSTALLING THE SURFACE ADAPTER

- Position the unit at the desired location level on the wall, making sure to respect the clearances indicated in Where to install your fan heater section in the owner's manual.
- 2. Mark the holes [A] on the wall.
- **3.** Attach the surface adapter to the wall using supports and screws (not included) suitable to hold the device's weight based on the wall finishing.

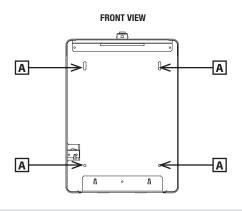


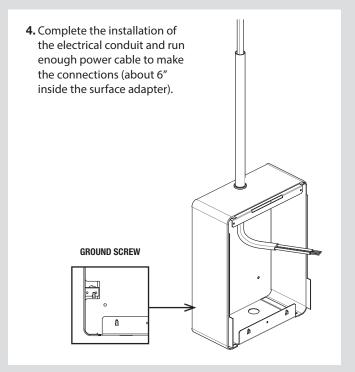


3

PREPARING THE FAN HEATER

 Pivot the fan heater's front panel toward the top of the unit [1] and slide it up.
 Remove the front panel completely [2] and place it on a clean surface where it won't be damaged.

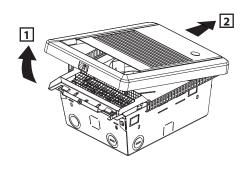

- 2. Remove the two screws. Keep the screws with the front panel.
- **3.** Lift the top **[3]** of the mechanical housing **[A]** and slide it **[4]** to remove it from the back box **[B]** which is no longer required.

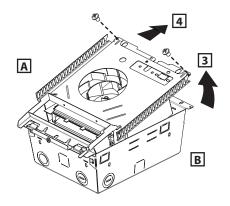

The surface adapter serves as a back box, and the latter must not be installed. Any references to the back box for subsequent steps in the owner's manual should be interpreted as referring to the surface adapter.